

TOYOTA Remote Programming Instructions

Begin with The driver's door open and unlocked. Key out of the ignition.

1. Insert and remove the key from the ignition switch 2 times within 5 seconds.

Steps 2 and 3 should be performed within 40 seconds.

2. Close and open driver's door TWICE.

3. Insert the key into the ignition and remove it.

Steps 4 – 6 should be performed within 40 seconds.

4. Close and open the driver's door twice.

5. Insert the key into the ignition.

6. Close the door.

Steps 5 and 6 should be reversed for the following models ONLY (close door first, then insert key into ignition):

2000 – 2005 Celica

2001 – 2003 Prius

2001 – 2005 ECHO

2001 – 2005 RAV4

2003 – 2004 Avalon

7. Turn the ignition switch from “off” to “On” and back to “off” at about 1 second intervals to select the desired mode:

1 time for ADD mode.

2 times for REWRITE mode.

3 times for CONFIRMATION mode.

5 times for PROHIBITION mode.

8. Remove the key from the ignition.

9. To confirm your mode selection, the power locks will now cycle “lock” to “unlock” a number of times corresponding to your key cycles in step 7.

If Confirmation or Prohibition modes have been selected, opening the door will complete the procedure.

10. For Add or Rewrite modes do the following within 40 seconds of Door

Procedure Lock confirmation:

A. Press both remote Lock and Unlock buttons simultaneously between 1 and 1.5 seconds and release.

B. Within 3 seconds of step A, press the transmitter Lock button for more than 1 second and release.

If the remote has been successfully programmed, the power locks will cycle “lock” to “unlock” once at this time.

If there are problems with the remote or the procedure up to this point, the locks will cycle twice. If this occurs, verify that you have received the correct transmitter, and then repeat the above procedure.

C. If multiple remotes are to be reprogrammed, repeat steps A and B.

11. Open the driver’s door to conclude programming mode.