

Remote Programming– GM Trucks 06' and Down

1. Close all vehicle doors.
2. Insert the key into the ignition.
3. Hold down the power door unlock button on the driver's side door and -continue to hold down until instructed to release.
4. Perform steps 5 through 8 in fairly rapid succession.
5. Turn the ignition switch to the ON position (as far as you can go without starting the engine).
6. Turn the ignition switch to the OFF position.
7. Turn the ignition switch to the ON position.
8. Turn the ignition switch to the OFF position.
9. Release the power unlock button on the door panel. The vehicle will lock and unlock the doors automatically to confirm remote programming mode.
10. Hold down the LOCK and UNLOCK buttons on the remote simultaneously until the door locks and unlocks. This step may take up to 30 seconds.
11. Repeat the previous step for each remote.
12. Turn the ignition switch to the ON position in order to exit the remote programming mode.