

MERCURY Remote Programming Instructions

- 1) Put the key in the ignition and turn the key on (without starting the vehicle) and off 8 times within 10 seconds, with the 8th time ending in on position.
- 2) All doors will lock then unlock to confirm programming mode.
- 3) Within 20 seconds, press any button on 1st remote. Door locks will cycle to confirm remote programming.
- 4) Within 20 seconds, press any button on 2nd and or up to 4 remotes.
- 5) Turn ignition **OFF**. Locks will cycle again to indicate end of programming mode.