

NISSAN Remote Programming Instructions

1.SIT IN CAR WITH DOORS AND WINDOWS CLOSED.

2.LOCK DOORS WITH POWER DOOR LOCK SWITCH ON DRIVER'S DOOR.

3.PUT IN AND PULL OUT KEY FROM IGNITION APPROX. 8 TIMES OR UNTIL YOU SEE THE HAZARD/TURN SIGNAL LIGHTS FLASH.(older models lights may flash after 4 or 5 times) YOU NEED TO DO THAT IN LESS THEN 10 SEC

4.WHEN HAZARD LIGHTS FLASH (ON 2005 AND NEWER MODELS THE GAUGE NEEDLES MAY JUMP A LITTLE INSTEAD), PUT KEY IN IGNITION AND TURN TO THE ACC POSITION.
(when your hazard lights flash your car is sending a signal to be received by the remote)

5.PRESS LOCK BUTTON ON THE NEW **REMOTE TRANSMITTER**, LIGHTS SHOULD FLASH AGAIN.

IF YOU HAVE 2 REMOTES, 1 NEW AND 1 OLD OR 2 NEW ONES, PLEASE CONTINUE WITH STEPS 6 AND 7. IF NOT, SKIP TO END.

6.PRESS UNLOCK BUTTON ON DRIVER'S DOOR, THEN LOCK BUTTON ON DRIVERS DOOR, LIGHTS WILL AGAIN FLASH

7.PRESS LOCK BUTTON ON 2ND NEW OR OLD REMOTE. LIGHTS AGAIN WILL FLASH.

YOU ARE DONE. EXIT VEHICLE AND TRY YOUR REMOTE. IT WILL NOT WORK FROM INSIDE CAR OR WITH KEY IN IGNITION.